


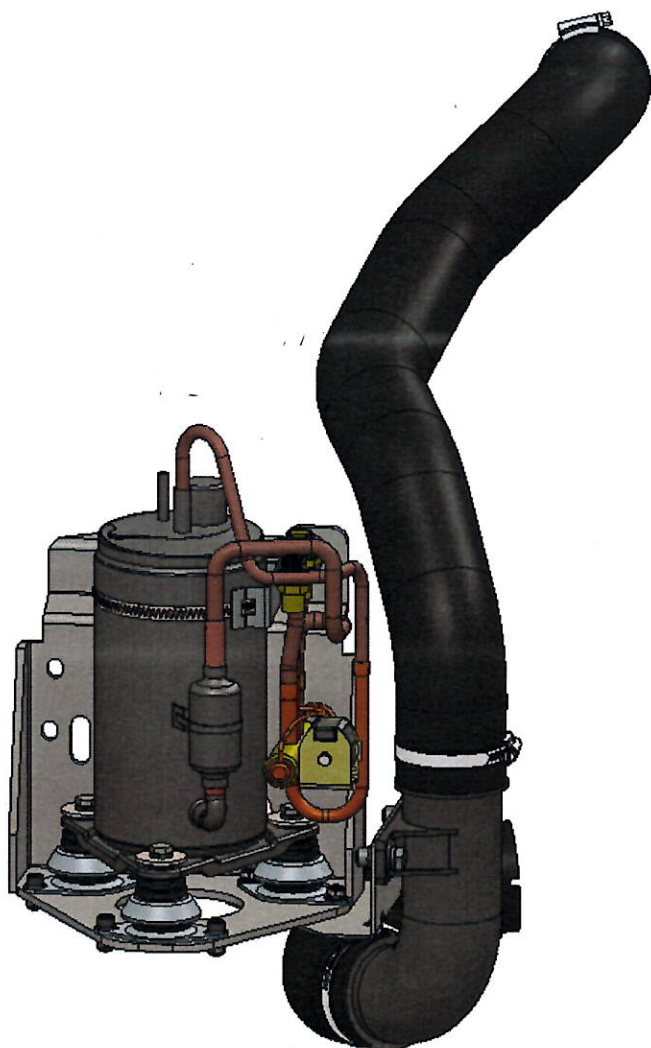


KAMI 6

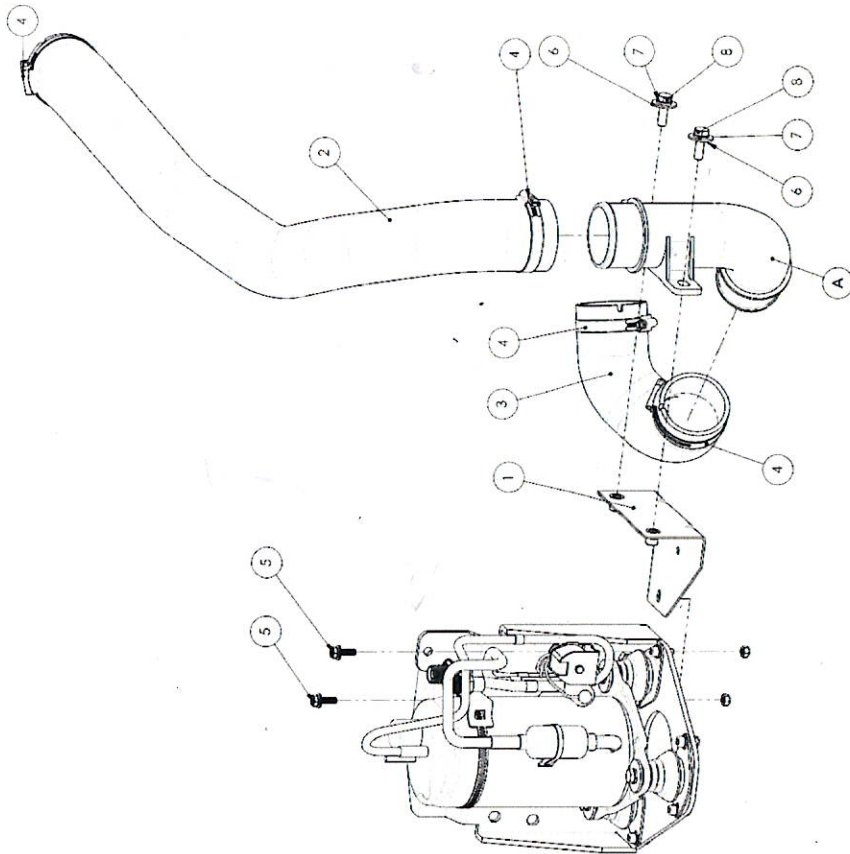


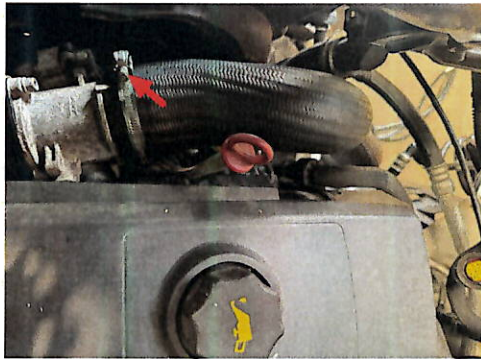


#	Code	Description	QTY
1	08314	Intercooler support bracket	1
2	08351	Intercooler Sleeve – Long	1
3	08352	Intercooler Sleeve – Short	1
4	08381	Clamp A=13mm, D=60-80mm	4
5	08333	Screw M6x20 TE+TC with washer and grower	2
6	03094	Washer M8x24 UNI 6593	2
7	05303	Grower D8	2
8	08372	Hex head screw M8x25 DIN 933	2
A	----	Intercooler adapter ORIGINAL (not supplied)	---

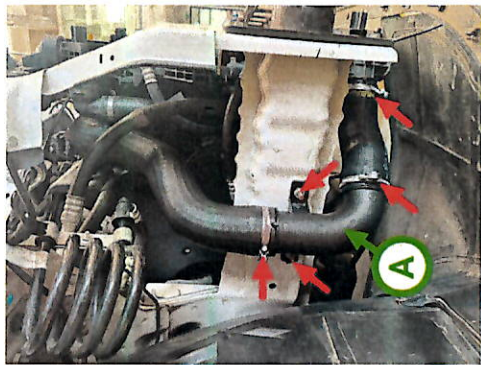




Remove the original intercooler pipe (Part "A" is the OE intercooler adapter and it will be used during the following steps)


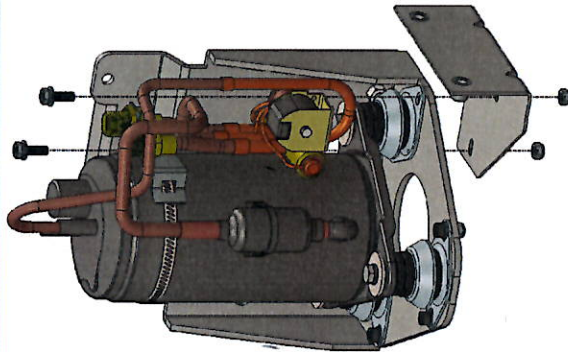


Install the intercooler pipe support bracket as shown in the picture

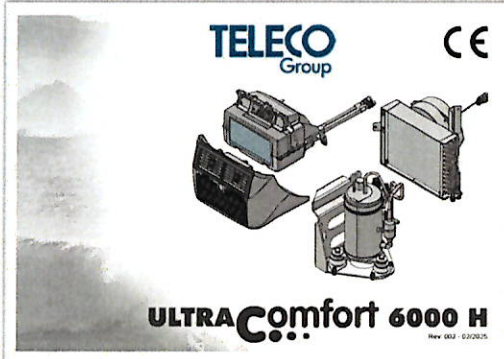

Install the Ultra Comfort 6000H air conditioner as per installation manual

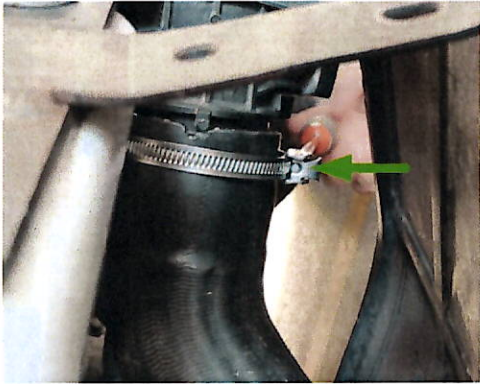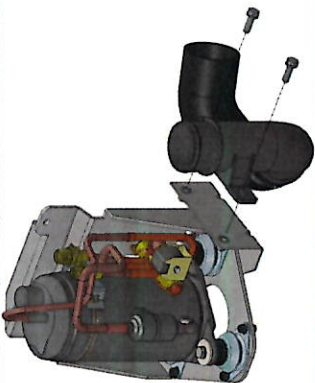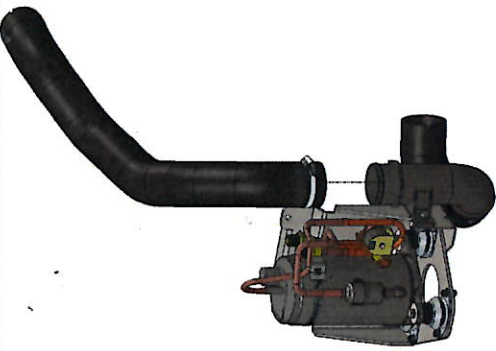	Install the Short intercooler sleeve on the intercooler adapter, and secure it with a clamp.	 Secure the short intercooler sleeve to the intercooler radiator with a clamp
	Install the assembled adapter on the intercooler pipe support bracket	 Install the long intercooler sleeve on the assembled intercooler adapter then secure it with a clamp

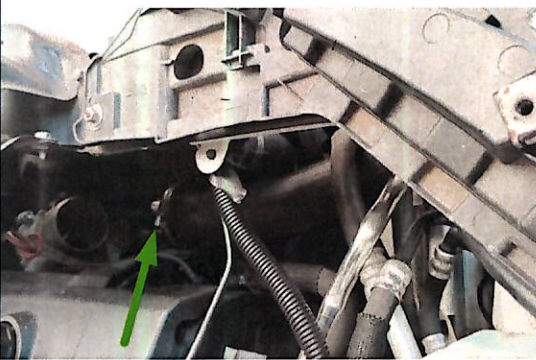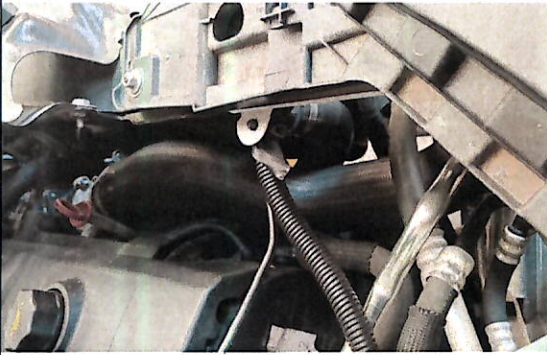 Secure the long intercooler sleeve to the engine manifold, then fix it with a clamp	 NOTE: The intercooler pipe MUST NO TOUCH any vibrating part of the engine
--	--